


Diffusion Module (DICTRA) Quick Start Guide - Graphical Mode

Thermo-Calc Version 2018b

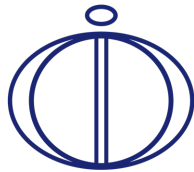

Copyright 2018 Thermo-Calc Software AB. All rights reserved.

Information in this document is subject to change without notice. The software described in this document is furnished under a license agreement or nondisclosure agreement. The software may be used or copied only in accordance with the terms of those agreements.

Thermo-Calc Software AB

Råsundavägen 18, SE-169 67 Solna, Sweden

+46 8 545 959 30

documentation@thermocalc.com

www.thermocalc.com

Introduction to the Diffusion Module (DICTRA)

The Diffusion Module (DICTRA) is an add-on module to the Thermo-Calc software package. It is used for simulation of diffusion controlled transformations in multicomponent systems. The simulations are both time- and space-dependent.

The Diffusion Module (DICTRA) is suitable for solving diffusion problems that include a moving boundary (so-called *Stefan problems*). The multicomponent diffusion equations in the various regions of a material are solved under the assumption that thermodynamic equilibrium holds locally at all phase interfaces. The concentration fields only vary along one spatial coordinate, but the geometry may be either planar, cylindrical or spherical.

In this section:

About this Quick Start Guide	4
Diffusion Module Terminology in Graphical Mode	5
Region	5
Grid Types	5
Phases	5
Composition	6
Geometry and Coordinates	6
Boundary Conditions	6
Setting up a Diffusion Simulation in Graphical Mode	7

About this Quick Start Guide

The following introduces you to the basic concepts, steps and theory to start using the Diffusion Module (DICTRA). An understanding of this information is necessary to ensure accurate calculations.



More details about the use of DICTRA can be found in Andersson et. al (2002)¹ and Borgenstam et al. (2000)².



If you are not familiar with Graphical Mode, it is recommended you read the *Diffusion Module User Guide* and *Thermo-Calc User Guide*.

1. Andersson, J.-O., Helander, T., Höglund, L., Shi, P., and Sundman, B., *Calphad*, 26 (2), pp. 273–312.

2. Borgenstam, Al, Höglund, L., Ågren, J. and Engström, A., *J. Ph. Equilib.*, 21 (3), pp. 269–280.

Diffusion Module Terminology in Graphical Mode

The following definitions are useful to help you understand the examples in this guide. For more detailed information search or browse the online help (**Help →Online Help**).




These terms are specific to working in Graphical Mode. The overall simulation in Console Mode is comparable but there are some differences in terminology and functionality.

Region

In Graphical Mode, a system consists of one *cell* with one or multiple *regions* in which the diffusion problem is to be solved.

Grid Types

These grid types are used in diffusion simulations: linear, geometric and double geometric. When you are setting up the simulation, in either Console Mode or Graphical Mode, a region must have a grid defined.

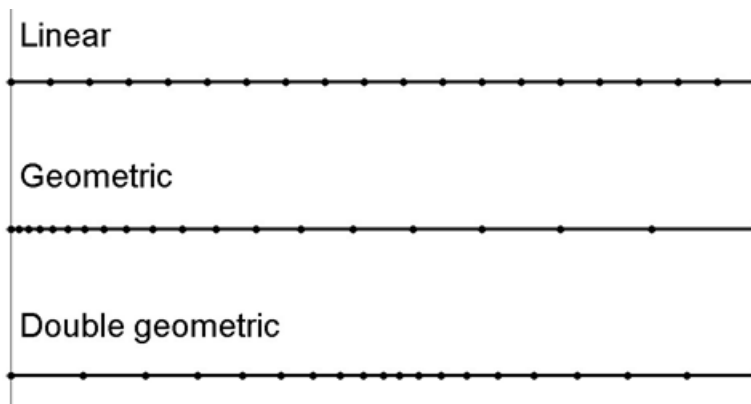

Phases

Each region must contain at least one *phase*. The so-called *homogenization model* is used if multiple phases are added inside a region, then the average properties of the local phase mixture is used. Phase(s) can also be added to interphases of region(s) and then only participate in the simulation if the driving force for precipitation of the phase exceeds a predefined value. A new region is then created where the name of the region is set to the name of the phase but with $R_$ added as a prefix.

Composition

Two types of composition variables are used in the configuration of the Diffusion Calculator: *weight fraction* or *mole fraction*.

The *u-fractions* are used in the diffusion equations. The u-fraction of a component *k* is defined as

$$\mu_k = \frac{x_k}{\sum_{j \in S} x_j}$$

The summation is only performed over the substitutional elements. The choice of the volume fixed frame of reference in the calculations make it convenient to use a composition variable which is related to the volume. The definition of the u-fraction is based upon the assumption that a species may or may not contribute to the volume of a phase. An interstitial element is assumed to not contribute to the volume. Substitutional elements are assumed to contribute equally to volume. Weight fraction, mole fraction or u-fraction can be used when plotting the results from a simulation.

Geometry and Coordinates

The Diffusion Module (DICTRA) can only handle diffusion problems where compositions vary along one spatial coordinate. The geometry of your system can be *planar*, *cylindrical* or *spherical*.

The *planar* geometry corresponds to an infinitely wide plate of a certain thickness. If the system has a planar geometry then the lower boundary (the zero coordinate) is at the left side of the system. The upper boundary (the coordinate with the highest value) is at the right side of the system.

Boundary Conditions

Boundary conditions are conditions that define how matter behaves at the boundaries of your system. By default, matter is not allowed to cross the system boundaries.

You can change the setting for both the lower boundary (left side/centre) and the upper boundary (right side/surface) of the system.

Setting up a Diffusion Simulation in Graphical Mode

When you are using the Graphical Mode version of the Diffusion Module (DICTRA), the steps to set up a simulation are a combination of adding *Activity* nodes (the System Definer, Diffusion Calculator and Plot Renderer are used in these examples) and then defining the applicable settings for each of these nodes in a Configuration window.

CONSOLE MODE VERSUS GRAPHICAL MODE

If you are accustomed to using Console Mode this Quick Start Guide will help you become familiar with how to use the Graphical Mode interface.

The overall sequence of what you define in Graphical Mode for the Diffusion Module is similar to the process in Console Mode. However, instead of using commands you are adding nodes and then entering settings for each of the nodes. More advanced functionality is available in Console Mode, and some of the commands available in Console Mode are not needed in Graphical Mode because it is automatically integrated into the Activity nodes, e.g. the Diffusion Calculator.

The following is a general overview of the steps to set up the simulation.

1. Use the **Diffusion Simulation** template to add the System Definer, Diffusion Calculator and Plot Renderer activity nodes.
2. On the **System Definer**, you select the thermodynamic and kinetic databases and add elements, which automatically include all phases.
3. On the **Diffusion Calculator**, you set the geometry (by default the geometry is planar), add region(s) and enter grid(s) and phase(s) in the region(s). You then enter composition(s) of phase(s).
4. On the **Plot Renderer**, you choose what to plot and then run the simulation, i.e. you **Perform** the sequence of nodes you have defined in the tree to produce the output simulation. You can also add a **Table Renderer** to tabulate the results of a single-equilibrium calculation or a stepping operation.

The rest of this guide describes each step in more detail for single phase, moving phase boundary and multiphase simulations.

Single Phase Simulations

In this section:


About the Single Phase Simulation	9
Theory for the Single Phase Simulation	10
Setting Up the Single Phase Simulation	11
System Definer Settings	13
Add a System Definer Node	13
Choose the Databases	14
Choose the Elements	15
Diffusion Calculator Settings	16
Define the Region and Composition Profiles	16
Define the Thermal Profile	18
Plot Renderer Settings	19
Renaming the Nodes and Saving the Project	21

About the Single Phase Simulation

In a 100 μm wide planar domain, the single phase example simulates the diffusion of Fe and Ni at a temperature of 1400 K. At this temperature the material is fully austenitic, i.e. the only phase present is the so-called fcc (face centered cubic) phase (in Thermo-Calc the name of this phase is FCC_A1). Initially, there is a linear variation in Ni going from 10 mass-% on the left-hand side to 50 mass-% on the right-hand side.

The simulation time is slightly different between the modes. For Console Mode it is 10^5 s and for Graphical Mode it is 30 hours.

By default the boundaries are closed. The plot generated shows the initial and final Ni profile.

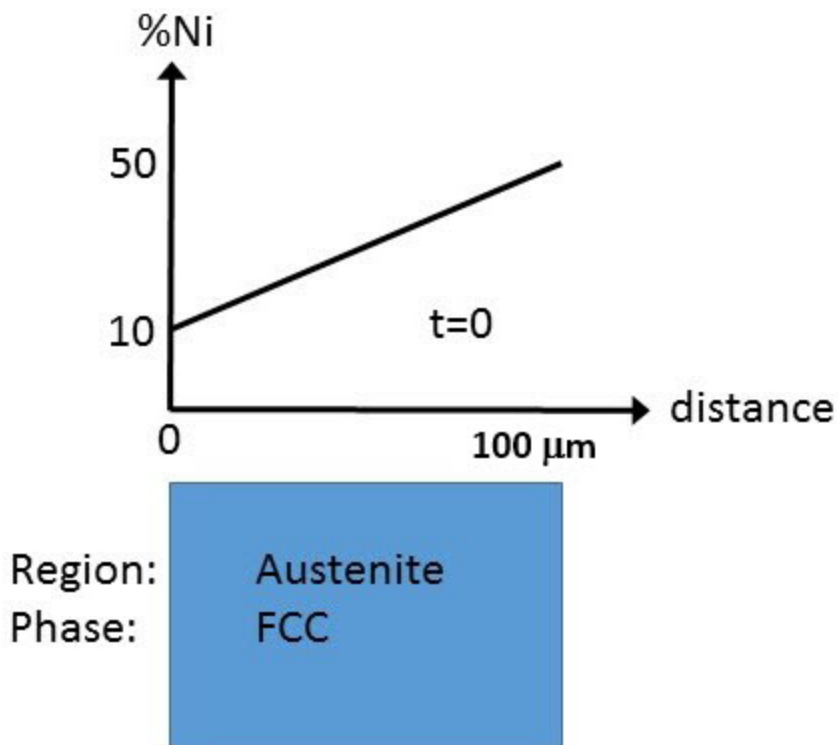

Schematic view of the initial state of Single Phase Diffusion example. The width of the domain is 100 μm and there is a linear gradient in composition going from 10 to 50 mass-% Ni. There is a single region named Austenite that consists of an fcc phase.

Theory for the Single Phase Simulation

The flux of a component k in the z -direction in an isobarothermal system is in general given by

$$J_k = \sum_{i=1}^n L_{ki} \frac{\partial \mu_i}{\partial z}$$

where L_{ki} is a matrix of kinetic coefficients and μ_i is the chemical potential of component i . The correlation effects, i.e. the coupling of the flux of k component to the chemical potential gradients of the other elements, are normally neglected

$$(L_{ki} = 0, k \neq i)$$

and thus

$$J_k = L_{kk} \frac{\partial \mu_k}{\partial z} = M_k c_k \frac{\partial \mu_k}{\partial z}$$

where c_k is the concentration and M_k the mobility of component k .

The equation for the flux is combined with the equation of continuity, which takes the following form in a planar domain,

$$\frac{\partial c_k}{\partial t} = \frac{\partial}{\partial z} (-J_k)$$

which relates the local evolution of the concentration of k to the divergence of the flux.

The expression for the flux can be expanded in terms of concentration gradients

$$J_k = - \sum_{i=1}^n M_k c_k \frac{\partial \mu_k}{\partial c_j} \frac{\partial c_j}{\partial z} = - \sum_{i=1}^n D_{kj} \frac{\partial c_j}{\partial z}$$

where the diffusion coefficient of component k with respect to the concentration gradient of component j has been introduced.

$$D_{kj} = M_k c_k \frac{\partial \mu_k}{\partial c_j}$$




The flux expressions above are given in the so-called lattice-fixed frame of reference. In practical calculations it is more common to use a volume-fixed frame of reference. For a discussion of these concepts, see Andersson and Ågren (1992)¹.

1. Andersson, Jan-Olof, and John Ågren. 1992. "Models for Numerical Treatment of Multicomponent Diffusion in Simple Phases." *Journal of Applied Physics* 72 (4): 1350–55.

Setting Up the Single Phase Simulation

For the single phase example, you can open the example project file included with your installation to first see how it is set up:

1. Open Thermo-Calc.
2. From the main menu, select **File** → or **Help** → **Examples Files**. The Graphical Mode folder opens by default.
3. Open the **Diffusion Module - DICTRA** folder and locate the `D_01_Diffusion_Single_Phase.tcu` file and double-click to open it.
4. The project opens in Thermo-Calc and adds this tree structure:

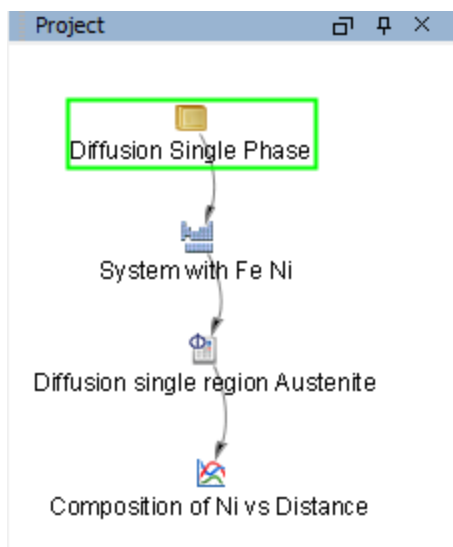


5. Click the top Project node (renamed to *Diffusion_Single_Phase*). At the bottom of the **Configuration** window click **Perform Tree**.

The **Event Log** shows the progress of the calculations:

```
Event Log
11:24:43,185 INFO TOTAL SIZE OF SYSTEM: 1E-04 [m]
11:24:43,186 INFO CPU time used in timestep 0 seconds
11:24:43,202 INFO TIME = 106721.83 DT = 10800.000 SUM OF SQUARES = 0.0000000
11:24:43,202 INFO U-FRACTION IN SYSTEM: FE = .709679855908542 NI = .290320144091458
11:24:43,203 INFO TOTAL SIZE OF SYSTEM: 1E-04 [m]
11:24:43,203 INFO CPU time used in timestep 0 seconds
11:24:43,214 INFO TIME = 108000.00 DT = 1278.1741 SUM OF SQUARES = 0.0000000
11:24:43,214 INFO U-FRACTION IN SYSTEM: FE = .709679855908542 NI = .290320144091458
11:24:43,214 INFO TOTAL SIZE OF SYSTEM: 1E-04 [m]
11:24:43,298 INFO >>> Sending to Dictra monitor: read C:\Users\amanda\AppData\Local\Temp\thermo-calc
```

When completed, the results are plotted in the **Results** window as shown below.

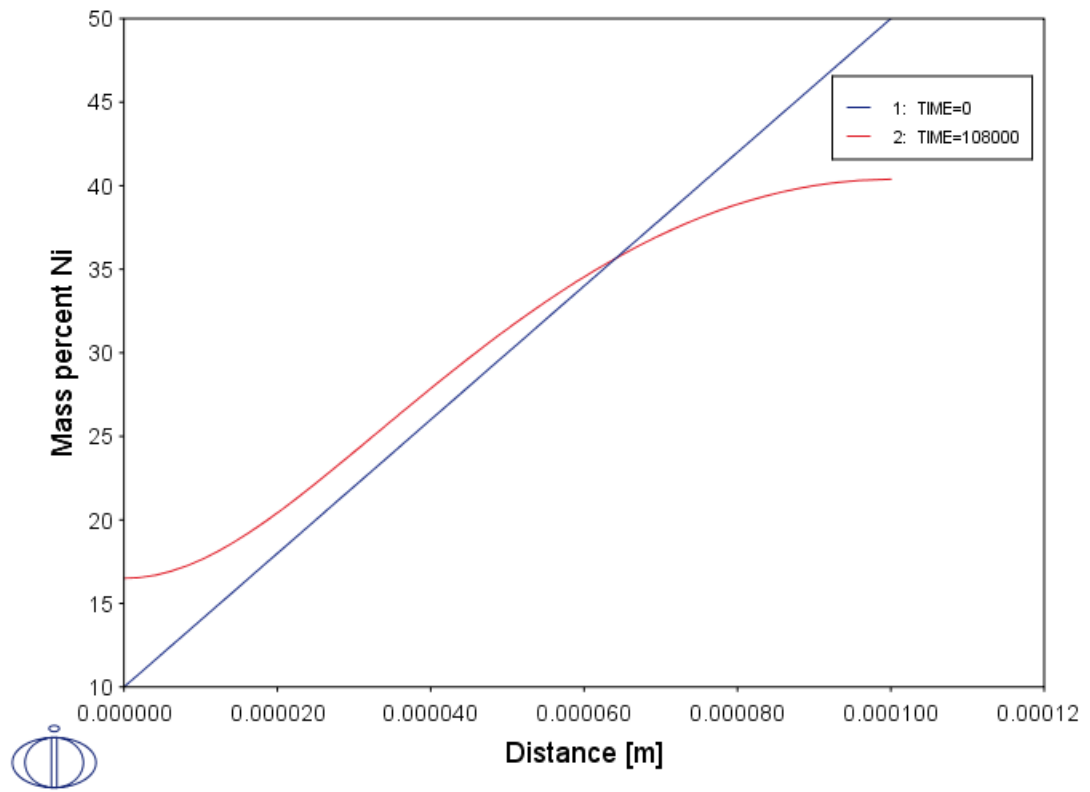

Output from the Single Phase example showing the initial and final Ni profile.

For the rest of the exercise, you will learn how to build this example step-by-step.

System Definer Settings



To learn more about the activity nodes and tree structure see 'Project Activities and the Tree Structure' in the *Thermo-Calc User Guide*.


The following describes how to set up the *D_01_Diffusion_Single_Phase.tcu* example from the beginning.

Add a System Definer Node

1. Open Thermo-Calc.
2. In the **Project** window, right-click **My Project** and select **Create New Activity** → **System Definer**.
3. In the **System Definer Configuration** window, you select the thermodynamic and kinetic databases to use and select the elements.


TIP: THE DIFFUSION SIMULATION TEMPLATE


For this first example the activity nodes are added one at a time. A faster way to add all the nodes you need is to use the **Diffusion Simulation** template.

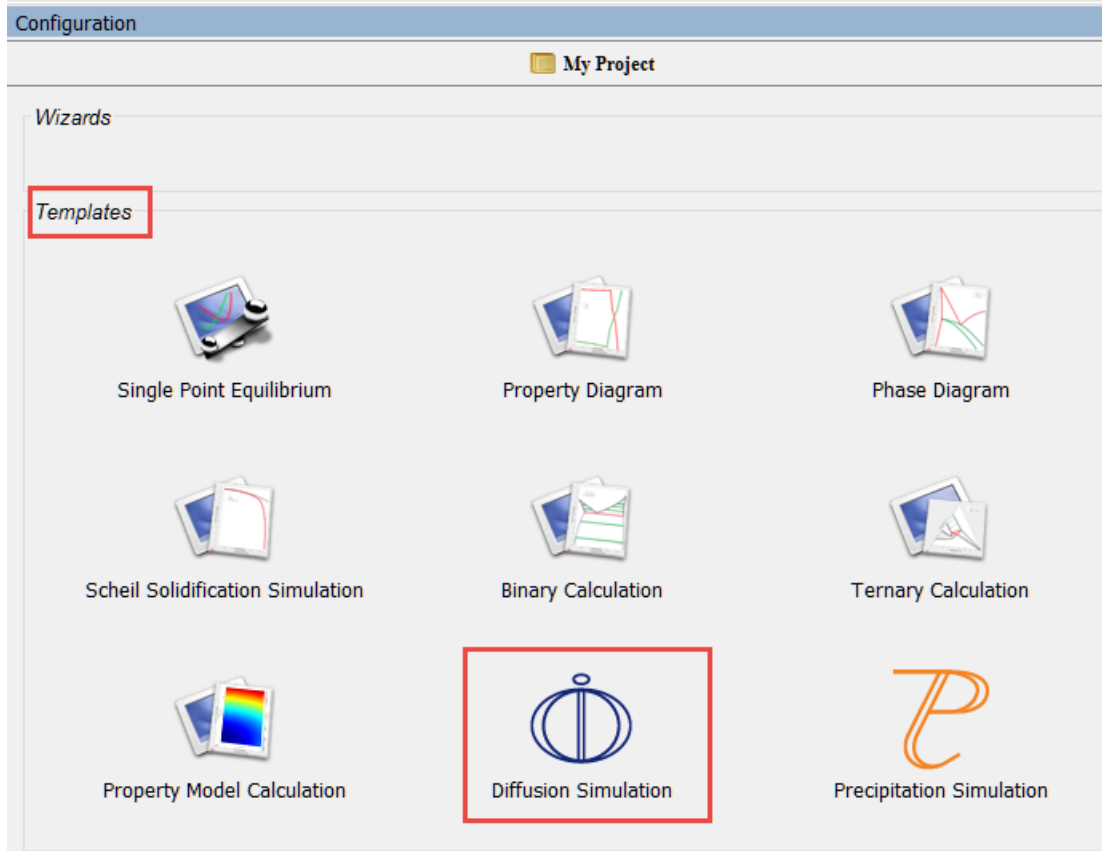

Choose the Databases

There are databases for different purposes and material types. This example uses two demonstration databases: **FEDEMO** (the thermodynamic iron-base database) and **MFEDEMO** (the kinetic/mobility iron-base database).


1. In the System Definer **Configuration** window click the **Databases** list and select the **FEDEMO** database.
2. Click the **Add a database** button .
3. Select the **MFEDEMO** database.

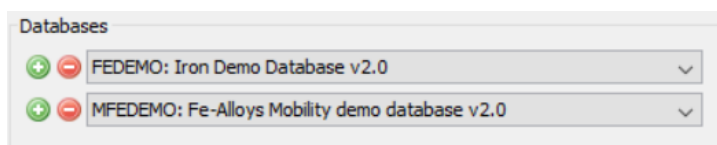

TIP: DATABASE PACKAGES

For this first example the databases are added one at a time. A faster way to add both the


databases is to add a predefined database **Package**.

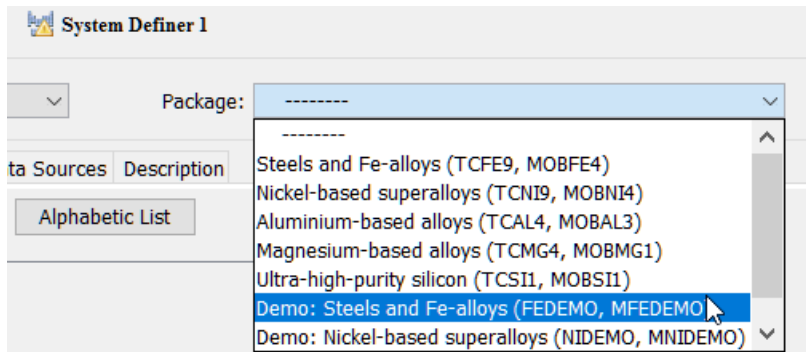

Choose the Elements

On the **Elements** tab, and based on the databases selected, you can select and review elements using a **Periodic Table** or **Alphabetic List** format. The demonstration databases have only a small number of elements to choose from.

1. In the **Periodic Table**, click **Fe**.
2. Click **Ni**.

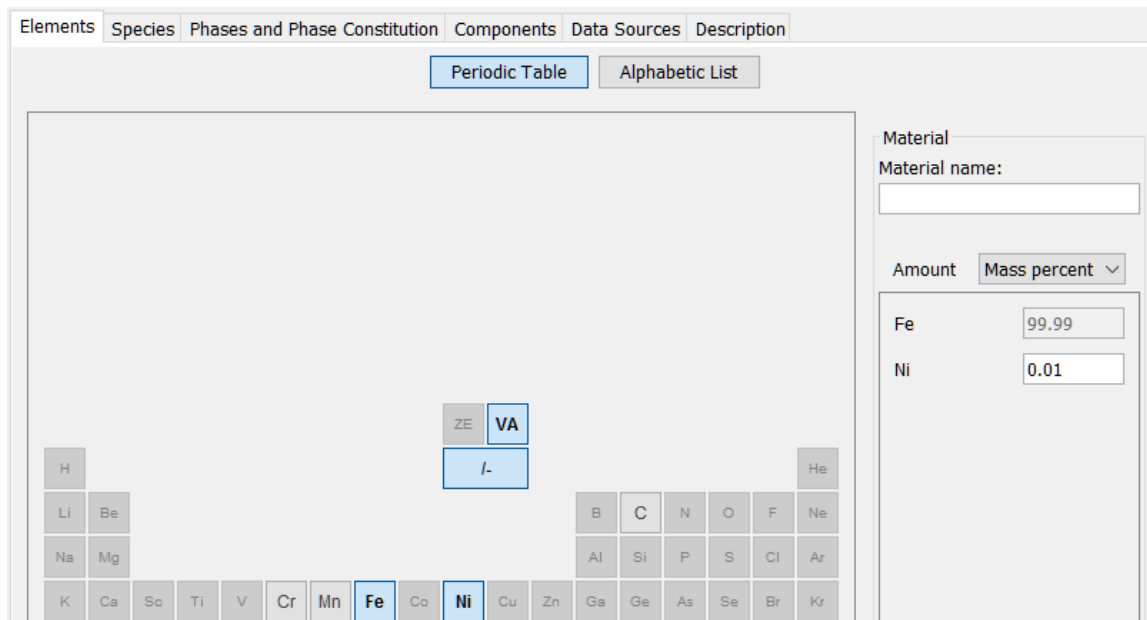

When using the System Definer with the Diffusion Calculator, you can keep all phases selected on the **Phases and Phase Constitution** tab.

Diffusion Calculator Settings

After you have completed the settings for the [System Definer](#) you start defining the diffusion parameters on the Diffusion Calculator.

In any simulation at least one *region* must be defined. This is a named container that designates a certain part of the domain. In this case it is the whole domain. The name of a region is arbitrary and specified by you.




The use of regions becomes clearer in the context of moving phase boundary simulations.

A region must contain a numerical *grid* specified by width and type. In this example, a 10^{-4} m (1e-4 m) wide, linear (i.e. equidistant) grid is used with 50 grid points.


Define the Region and Composition Profiles

1. In the **Project** window, right click the **System Definer** node and select **Create New Successor → Diffusion Calculator**. A Diffusion Calculator node is added to the tree structure.

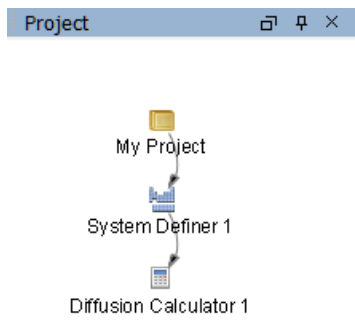


If you used the **Diffusion Simulation** template, then this activity node is already there. Click the **Diffusion Calculator** node to access the **Configuration** window settings.

2. You are now going to add the settings to the Configuration window on the **Conditions** tab. Keep the defaults for *Composition unit (Mass percent)* and *Length unit (m)*. A **Planar** geometry is used for all the examples.
3. In the *Region Name* field, enter `Austenite`. This name is automatically updated on the tab.

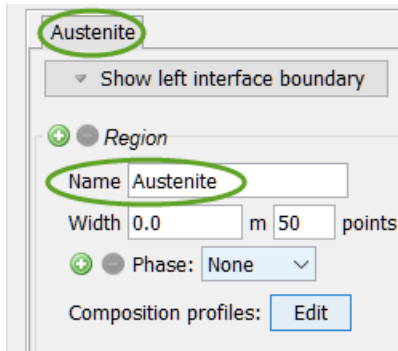

TIP: DOUBLE-CLICK THE REGION TAB TO NAME A REGION


Another way to enter the region name is to double-click the tab, enter a name and then press enter.

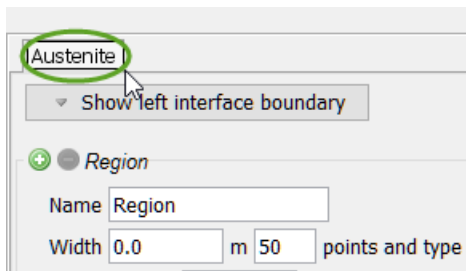

4. In the **Width** field replace the default with $1e-4$. Keep the defaults for number of points (**50**) and type of grid (**Linear**).
5. From the **Phase** list, select **FCC_A1**.

The initial composition profile must be specified for all regions. Since there are only two elements, Fe and Ni, the initial composition profile must only be given for one of them.

6. Click **Edit** next to **Composition profiles**. Fe is chosen as the *Dependent component*.

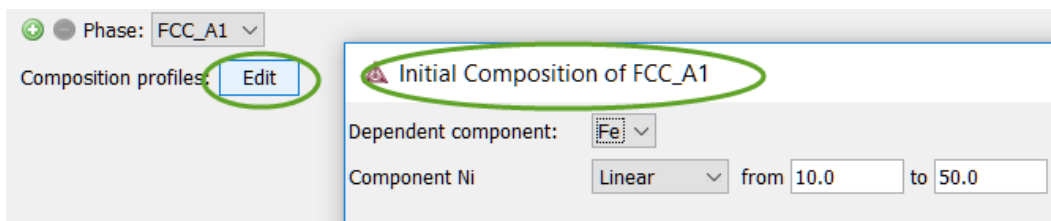

There are many ways to specify the composition profile, e.g. an arbitrary position dependent function. In this example, the default *Linear* type is used.


7. The initial profile for Ni is a **Linear** variation. In the **from** field enter 10 and in the **to** field enter 50. Click **Apply**.

These settings mean that the profile goes from 10 (mass-%) on the lower/left hand side of the system to 50 (mass-%) on the upper/right hand side of the system.

Define the Thermal Profile

The default **Isothermal** profile is used for this example. A constant temperature of 1400 K is used during the simulation, which is run for 30 hours. Enter these values in the fields:

1. In the **Temperature** field, enter 1400. Keep **Kelvin** as the default unit.
2. In the **Simulation time** field, enter 30. Select **Hours** from the list.

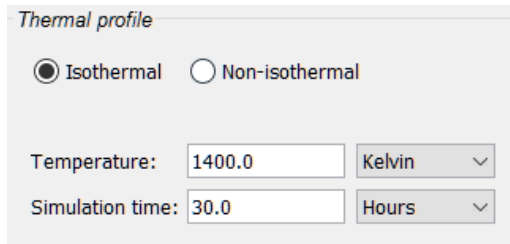

The screenshot shows a dialog box titled "Thermal profile". It contains two radio buttons: "Isothermal" (which is selected) and "Non-isothermal". Below the radio buttons, there are two rows of input fields. The first row is labeled "Temperature:" and has a text input field containing "1400.0" and a dropdown menu set to "Kelvin". The second row is labeled "Simulation time:" and has a text input field containing "30.0" and a dropdown menu set to "Hours".




There are no changes to the default settings on the **Options** tab. You can click the tab to see what settings are available and then search the Online Help for more information.

Plot Renderer Settings

After you have completed the settings for the [System Definer](#) and [Diffusion Calculator](#) you define the plot parameters and run (perform) the simulation.

1. In the **Project** window, right click the **Diffusion Calculator** node and select **Create New Successor** → **Plot Renderer**. A Plot Renderer node is added to the tree structure.

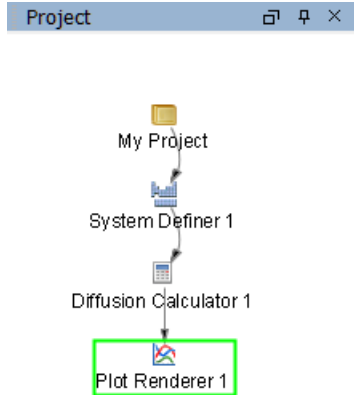


If you used the **Diffusion Simulation** template, then this activity node is already there. Click the **Plot Renderer** node to access the **Configuration** window settings.

For this first example, all the defaults are kept and there is only one setting to add. In most cases, either a specific position in the domain or one or more specific times must be specified depending on whether time or spatial position is chosen as independent (x-axis) variable.

2. In the time field, enter 0.0 before the 30.0 , which is automatically taken from the Diffusion Calculator setting.
3. Click **Perform**. If you have entered everything correctly, you should get this plot showing the composition profile of Ni at the initial (0 hours) and final time (30 hours)

or 108,000 seconds).

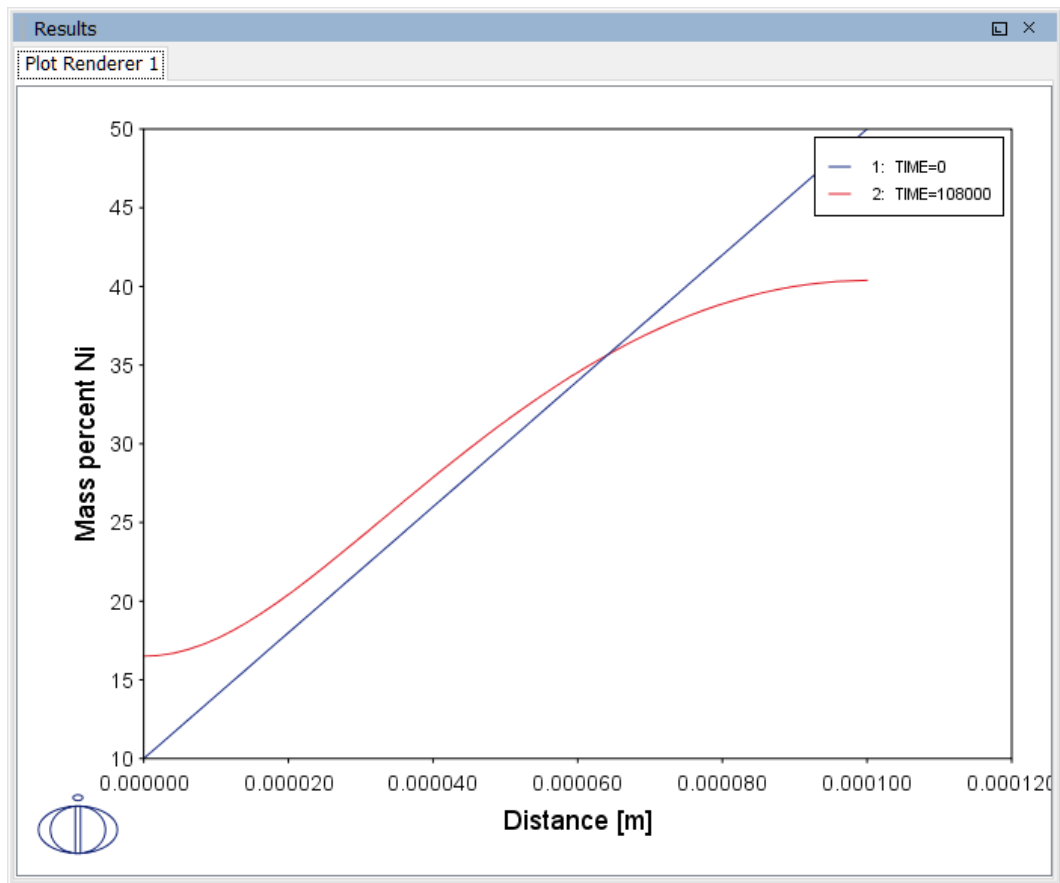

Renaming the Nodes and Saving the Project

You can rename the nodes in the tree at any time during the creation of a project. For this first example it was left until the end so you could become familiar with the System Definer, Diffusion Calculator and Plot Renderer settings. It is also important at this point to save the project. You can do this at any time and it is good practice to save your project often.

The following renaming can be done to match the example file included with your installation:



When you rename a node, associated tabs are also renamed automatically. For example, when the Plot Renderer is renamed, so is the tab in the Results window.

1. Right-click the **My Project** node and select **Rename**.
2. In the **New name** field enter `Diffusion_Single_Phase`. Click **OK**. Continue renaming the other nodes.
3. Right-click the **System Definer**, select **Rename** and enter `System with Fe Ni`.
4. Right-click the **Diffusion Calculator**, select **Rename** and enter `Diffusion single region Austenite`.
5. Right-click the **Plot Renderer**, select **Rename** and enter `Composition of Ni vs Distance`.
6. Save the project. To do this, click the **Save** button and navigate to a location on your computer where you can easily find this project file.


Moving Phase Boundary Simulations

In this section:

About the Moving Phase Boundary Simulation	23
Theory for the Moving Phase Boundary Simulation	24
Moving Phase Boundary Example Project	25
System Definer Settings	28
Add the Databases and the Elements	28
Diffusion Calculator Settings	29
Add a Ferrite Region	29
Add an Austenite Region	30
Define the Thermal Profile	31
Plot Renderer Settings	32
Add a Second Plot	33


About the Moving Phase Boundary Simulation

The growth of ferrite (bcc) into austenite (fcc) is simulated in this example. The austenite is assumed to be initially homogeneous with the composition Fe - 0.15 mass-% C and the transformation temperature is 1050 K. The initial thickness of the austenite is 2 mm and an initially very thin ferrite (1 nm) is also present at the start of the simulation. The initial state is as below.

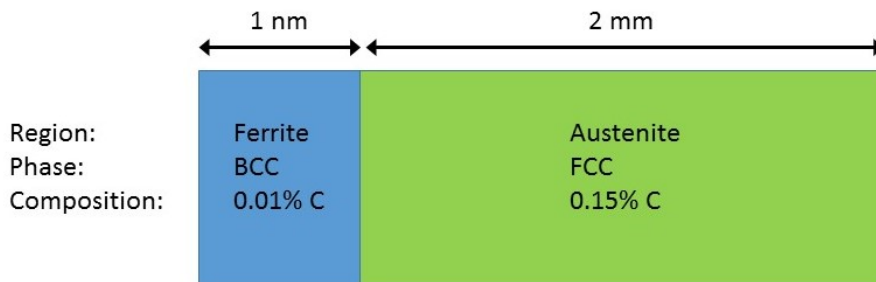

The set-up of the Moving Boundary example. There are two regions, Ferrite and Austenite, consisting of bcc and fcc, respectively.

A schematic graph of the carbon profile during the transformation is shown in the image below. Crusius et al. (1992)¹ is recommended as further reading.

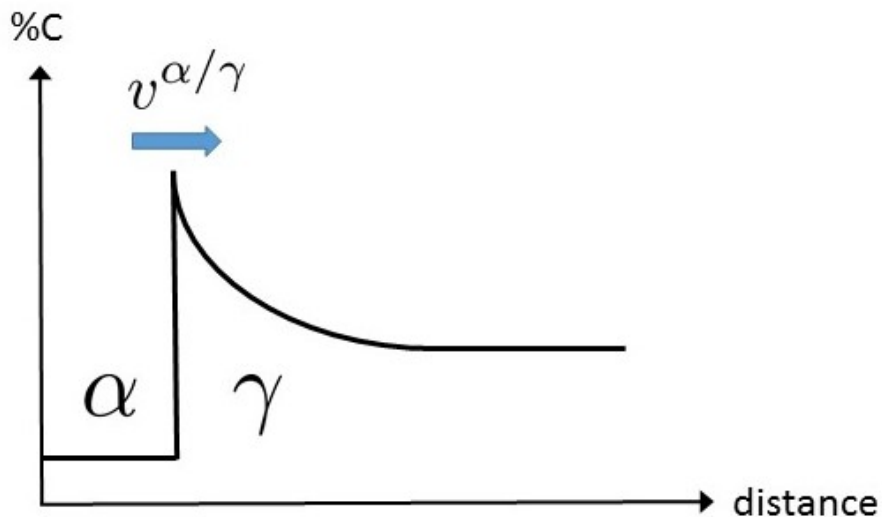

Schematic view of the carbon profile during the transformation from austenite (γ) to ferrite (α) in the Moving Boundary example.

¹ Crusius, Sabine, Lars Höglund, Ursula Knoop, Gerhard Inden, and John Ågren. 1992. "On the Growth of Ferrite Allotriomorphs in Fe-C Alloys." *Zeitschrift Fur Metallkunde* 83 (10): 729–38.

Theory for the Moving Phase Boundary Simulation

It is assumed that local equilibrium holds at the phase interface, i.e. the chemical potentials of all elements are continuous across the boundary, but the chemical potential gradients are in general discontinuous.

In order to maintain mass balance a set of flux balance equations must be satisfied at the phase interface:

$$v^{\alpha/\gamma}(c_k^\alpha - c_k^\gamma) = J_k^\alpha - J_k^\gamma \quad k = 1, \dots, n - 1$$

where v is the interfacial velocity. The concentrations and the fluxes c and J are those at the interface on the α and γ sides, respectively.

In the present case there are no degrees of freedom at the interface and the concentrations can be taken directly from a phase diagram. There is only one flux balance equation and the interface velocity can be evaluated once the fluxes at the interface are known. However, for ternary and higher systems the state at the interface must be found by some iterative procedure.

For more information on moving phase boundary problems, see, for example, Ågren (1982)¹, Crusius et al. (1992)² and Höglund (1997)³.

1. Ågren (1982) "Numerical Treatment of Diffusional Reactions in Multicomponent Alloys," *J. Phys. Chem. Solids*, 43 (4), pp. 385–391.


2. Crusius, Sabine, Gerhard Inden, Ursula Knoop, Lars Höglund, and John Ågren. 1992. "On the Numerical Treatment of Moving Boundary Problems." *Zeitschrift Fur Metallkunde* 83 (9): 673–78.

3. Höglund (1997). *Computer simulation of diffusion controlled transformations in multicomponent alloys*, PhD Thesis, KTH Royal Institute of Technology, Stockholm, Sweden.


Moving Phase Boundary Example Project


For the moving phase boundary simulation, you can open the example project file included with your installation to see how it is set up.

1. Open Thermo-Calc.
2. From the main menu, select **File** → or **Help** → **Examples Files**. The Graphical Mode folder opens by default.
3. Open the **Diffusion Module - DICTRA** folder and locate the file `D_02_Diffusion_Moving_Boundary.tcu` and double-click to open it.
4. The project opens in Thermo-Calc. Click the top Project node (renamed to *Diffusion_Moving_Boundary*). At the bottom of the **Configuration** window click **Perform Tree**.

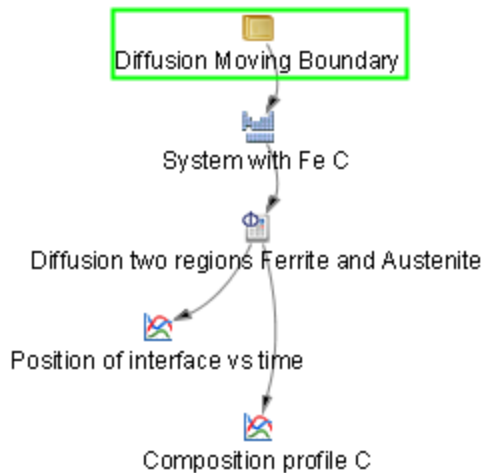

When completed, the results are plotted in the **Results** window. There are two plot nodes, which creates two plots: The ferrite/austenite phase interface position as a function of time and the composition profile for Carbon.

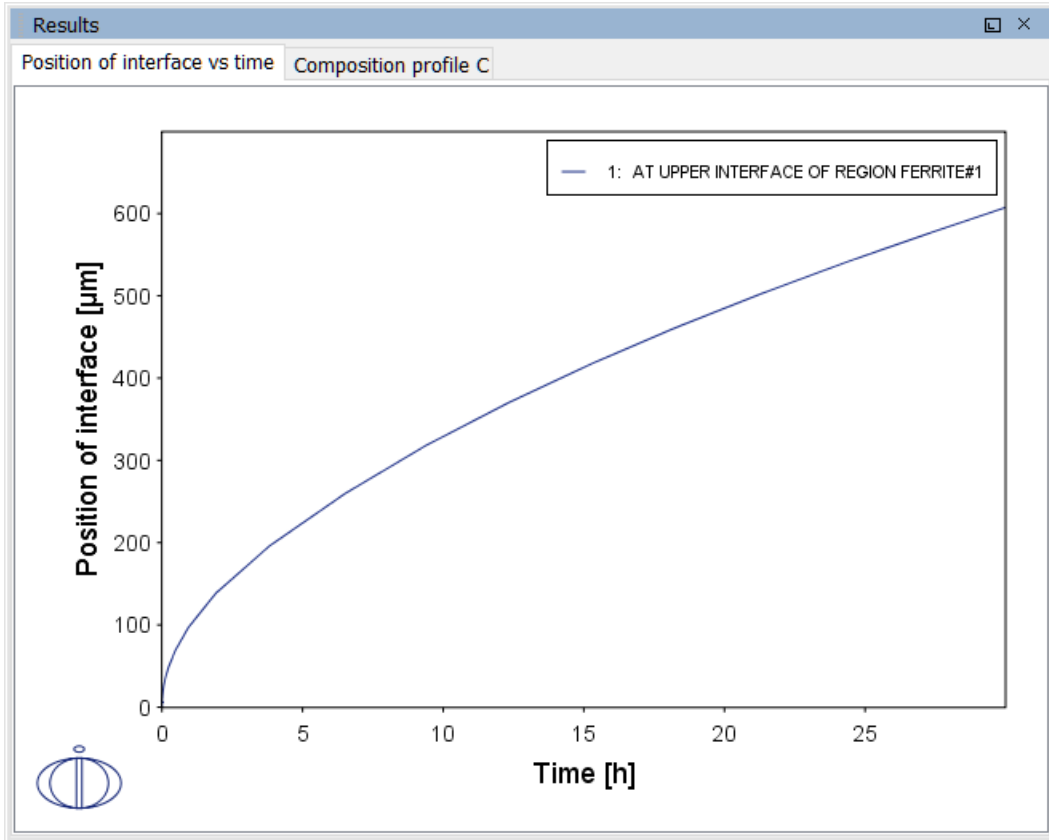

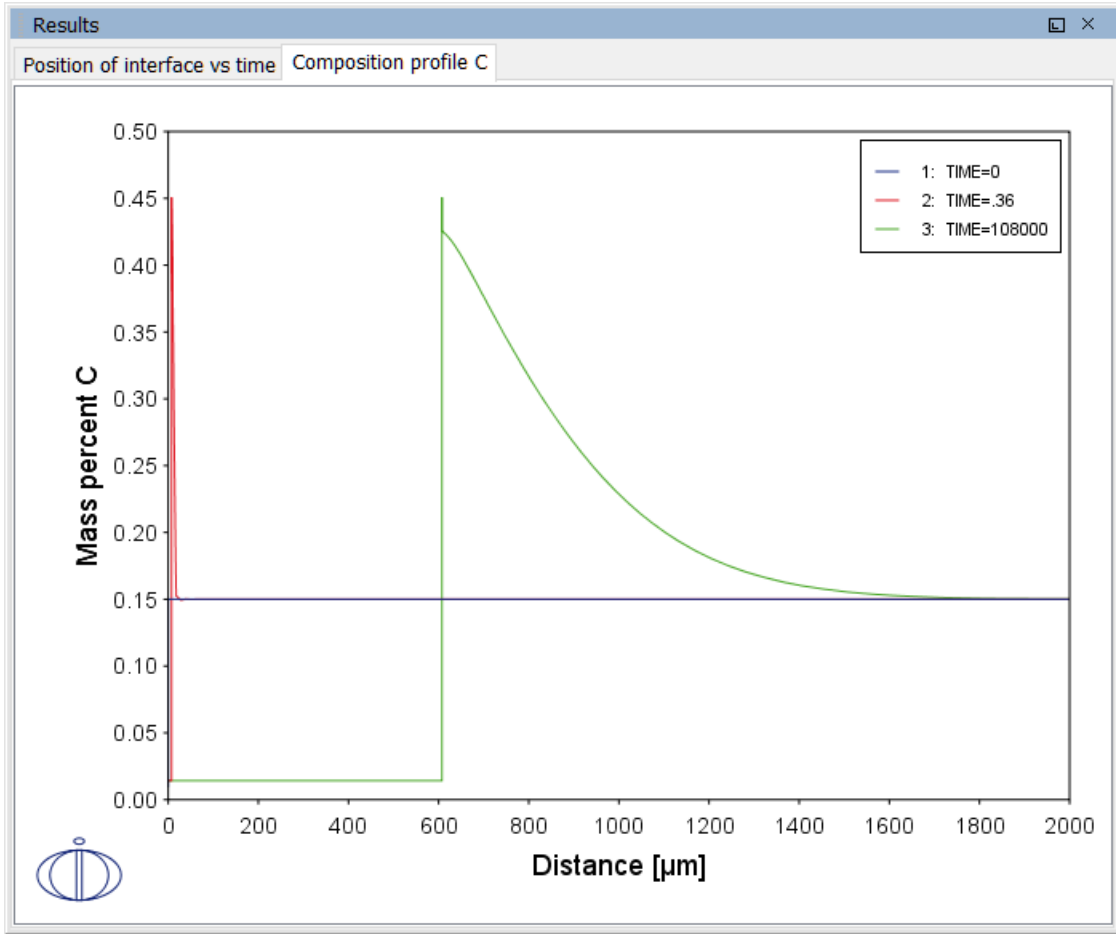

System Definer Settings

This is a continuation from the Single Phase simulation and it describes how to set up the example file *D_02_Diffusion_Moving_Boundary.tcu*. In this example, the shortcuts explained for the Single Phase [System Definer](#) are used.

Add the Databases and the Elements

1. Open a new instance of Thermo-Calc.
2. In the **My Project** window click the **Diffusion Simulation** template icon.
3. In the System Definer **Configuration** window click the **Package** list and choose **Demo: Steels and Fe-alloys (FEDEMO, MFEDEMO)**.
4. In the **Periodic Table**, click **Fe** then **C**.
5. Rename the nodes. Right-click **System Definer** and rename it to **System with Fe C**.
6. Right-click **My Project** and give it the same name as the project e.g. *Diffusion_Moving_Boundary*.
7. Save the project file with a new name, such as *DiffusionMovingBoundary*.

Diffusion Calculator Settings


After you have completed the settings for the [System Definer](#) you define the diffusion calculation parameters.

The phase interface between ferrite and austenite is created by introducing an austenite region that is attached to the ferrite region. Regions are always separated by phase interfaces and must therefore always contain different phases.

In this simulation both the FCC_A1 and BCC_A2 phases are included. Both phases are assumed to be initially homogeneous, the bcc phase having 0.01 mass-% C and the fcc phase 0.15 mass-% C. These settings are entered on the Diffusion Calculator.

Add a Ferrite Region

1. In the **Project** window, click the **Diffusion Calculator** node.
2. Keep the default for *Composition unit* (**Mass percent**). Choose **µm** for the **Length unit**. A **Planar** geometry is used for all the examples.
3. Double-click the **Region** tab and enter `Ferrite`. Press <Enter>.

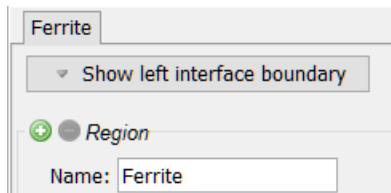

4. In the **Width** field enter $0.001 \mu\text{m}$ and change the default number of points to 10. Keep the default **Linear** grid type.

The grid type for the ferrite region is the same as in the single-phase simulation example, i.e. equidistant.

5. From the **Phase** list select **BCC_A2**.
6. Click **Edit** next to **Composition profiles**. **Fe** is chosen as the **Dependent component** and the initial profile for **Component C** is a **Linear** variation.
7. Enter 0.01 in both fields to represent C going from 0.01 (mass-%) on the lower, left-hand side of the system to 0.01 (mass-%) on the upper, right-hand side of the system. Click **Apply**.

⚠ Internal Composition


Dependent component: Fe ▾
Component C Linear ▾ from 0.01 to 0.01

Add an Austenite Region


1. Next to *Region*, click the green add button . A new tab called **Region** is added.



If you add a region and then need to change the order, right-click the applicable tab and choose **Move left** or **Move right**.

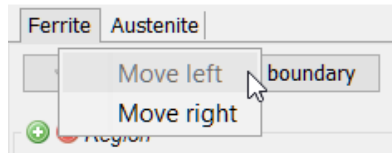

2. In the *Region Name* field, enter *Austenite*. This name is automatically updated on the tab and above the grid points in a new section for the second region.

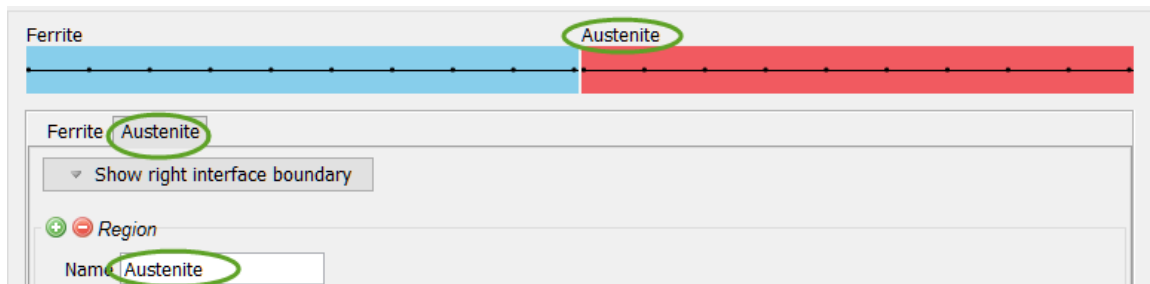

3. In the **Width** field enter 2000 μm .
4. In the next field (the number of points), enter 50.
5. Select a **Geometric** type of grid and enter 1.05 for the **Ratio**.

For the austenite region the grid type is *geometric*. For these grids the grid point spacing changes by a constant factor between every grid point. In this case the spacing increases by 5%, i.e. a factor of 1.05, from the lower, left side for each grid point. It is usually good practice to have a denser grid close to moving boundaries where the composition profiles are expected to vary a lot during the simulation.

6. From the **Phase** list, select **FCC_A1**.

7. Click **Edit** next to **Composition profiles**. Enter 0.15 in both fields to represent **Component C** going from 0.15 (mass-%) on the lower, left-hand side of the system to 0.15 (mass-%) on the upper, right-hand side of the system. Click **Apply**. The Austenite grid shows the points.




The domain now consists of two regions: Ferrite and Austenite.

Define the Thermal Profile

The default **Isothermal** profile is used.

1. In the **Temperature** field, enter 1050.
2. In the **Simulation time** field, enter 30. Choose **Hours** from the list.
3. Right-click **Diffusion Calculator** and rename it to **Diffusion two regions Ferrite and Austenite**.

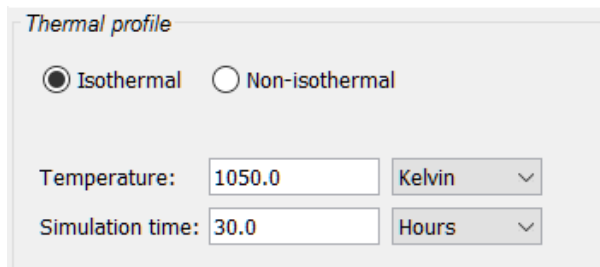


As with the single phase example, the **Options** tab keeps all the defaults.

Plot Renderer Settings

After you have completed the settings for the [System Definer](#) and [Diffusion Calculator](#) you define the plot parameters.

1. In the **Project** window, click the **Plot Renderer** node.
2. Choose **Time** as the **X-Axis variable** and select **Hours**.
3. Choose **Position of interface** as the **Y-Axis variable**.
4. In the **Interface** list, keep the default **Ferrite/Austenite**.
5. Right-click **Plot Renderer** and rename it to **Position of interface vs time**.
6. Click **Perform** If you have entered the same settings the plot shows the ferrite/austenite phase interface position as a function of time. The plot has the parabolic appearance characteristic for many types of diffusion simulations.

Plot result from the example showing the phase interface position as a function of time.

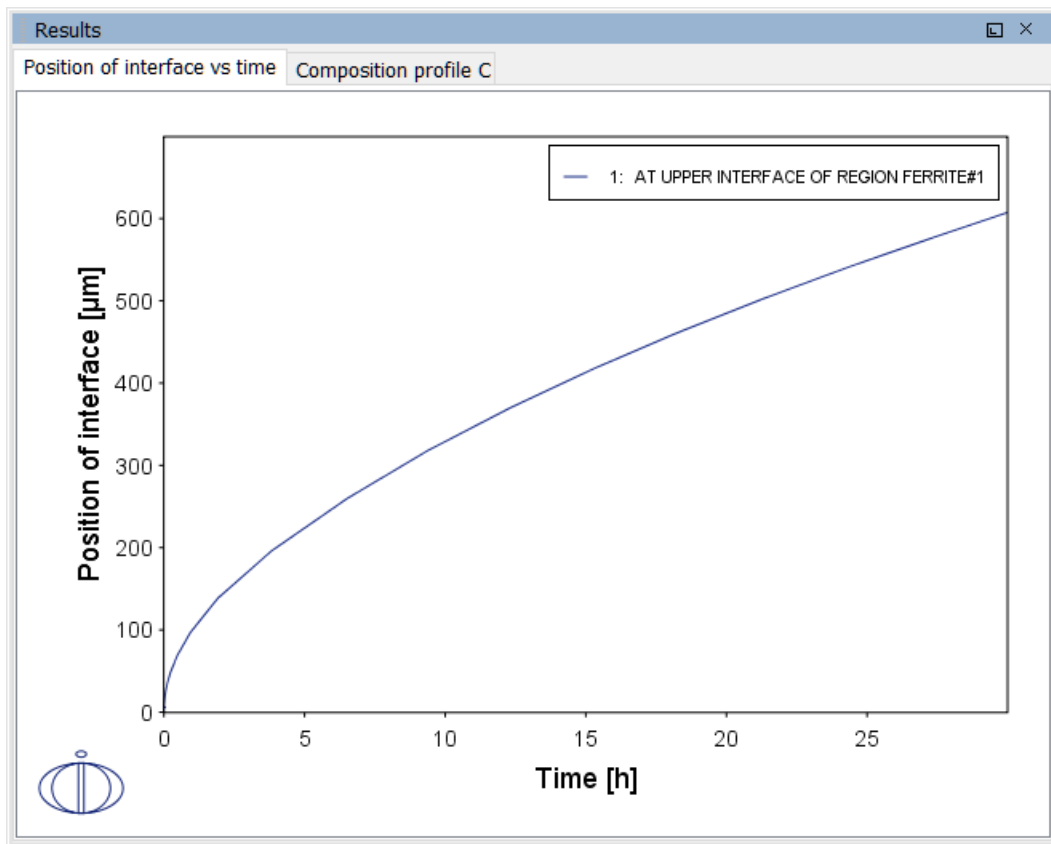


Add a Second Plot

1. Right-click the **Diffusion Calculator** node. Remember it is renamed to *Diffusion two regions Ferrite and Austenite*.
2. From the **Create New Successor** list, click **Plot Renderer**.
3. In the new Plot Renderer node **Configuration** window, for the **X-Axis variable**, change the Distance units to μm .
4. Click to clear the **Automatic scaling** check box.
5. In the **Limits** fields, keep 0 as the lower limit, enter 2000 for the upper limit and 200 for **step**.
6. For the **Y-Axis variable**, keep the default Composition and choose **C** from the list.
7. Choose **Hours** as the **Time** unit and enter 0.0 1.0E-4 30.0 in the field.

The image shows a software interface for configuring two plots. The top plot is for Distance, with units in μm and 'All regions'. It has a linear axis type, limits from 0.0 to 2000.0 with a step of 200.0, and automatic scaling is unchecked. The bottom plot is for Composition of Carbon (C) in Mass percent. It also has a linear axis type, limits from 0.0 to 1.0 with a step of 0.1, and automatic scaling is checked. A Time field is set to 'Hours' with values 0.0, 1.0E-4, and 30.0. At the bottom left, there are three icons: a green plus sign, a grey circle, and a checked checkbox.

8. Right-click **Plot Renderer** and rename it to **Composition profile C**.
9. Click **Perform** If you have entered the same settings the plot shows the composition

profile of C.

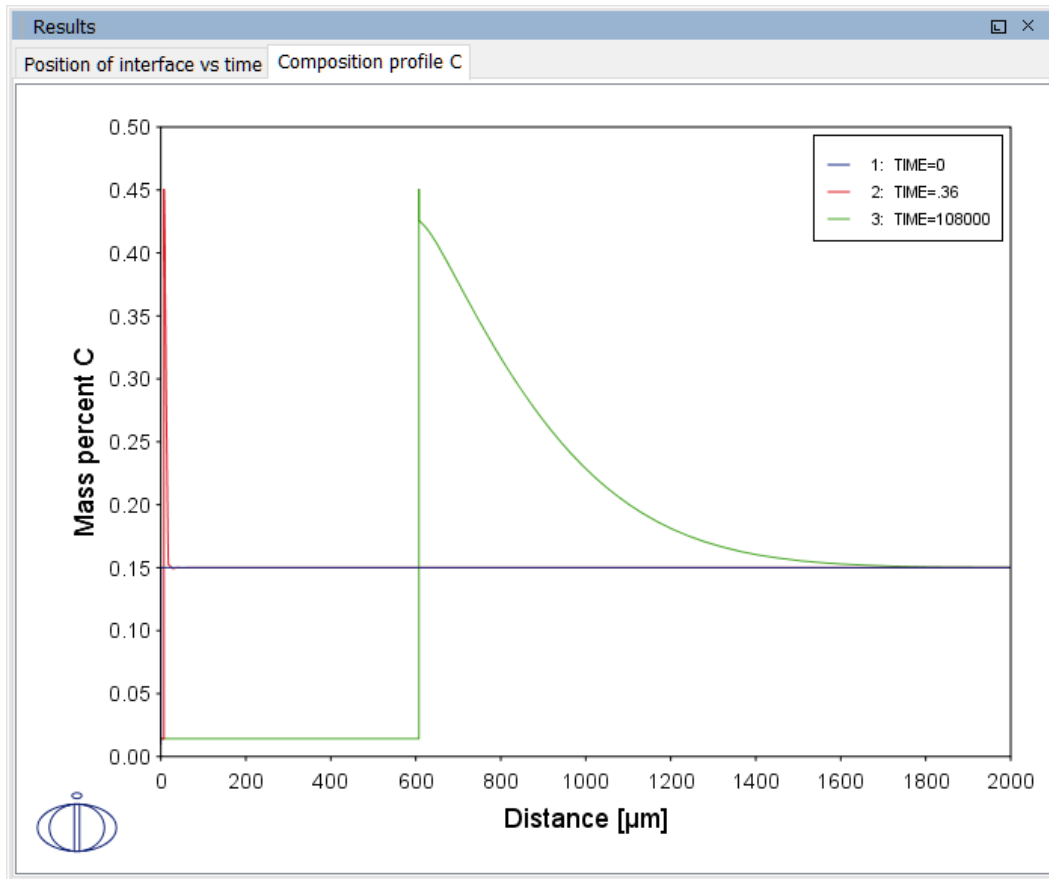

Multiphase Simulations


In this section:

About the Multiphase Simulation	36
Theory for the Multiphase Simulation	37
Multiphase Example Project	38
System Definer Settings	40
Add the Databases and the Elements	40
Diffusion Calculator Settings	41
Define the Ferrite and Austenite Regions	41
Define the Thermal Profile	42
Choose the Homogenization Function	42
Plot Renderer Settings	43

About the Multiphase Simulation

This example simulates the evolution of an Fe-Cr-Ni diffusion couple during a 100 hour heat treatment at 1100° C (1373.15 K). Both end members of the diffusion couple are duplex ferrite plus austenite, but the majority phase is ferrite on the left-hand side and austenite on the right.

With this type of simulation it is assumed that the material is fully equilibrated at each grid point, i.e. the local phase fractions, phase compositions and so forth are obtained from an equilibrium calculation with the local overall composition as a condition.

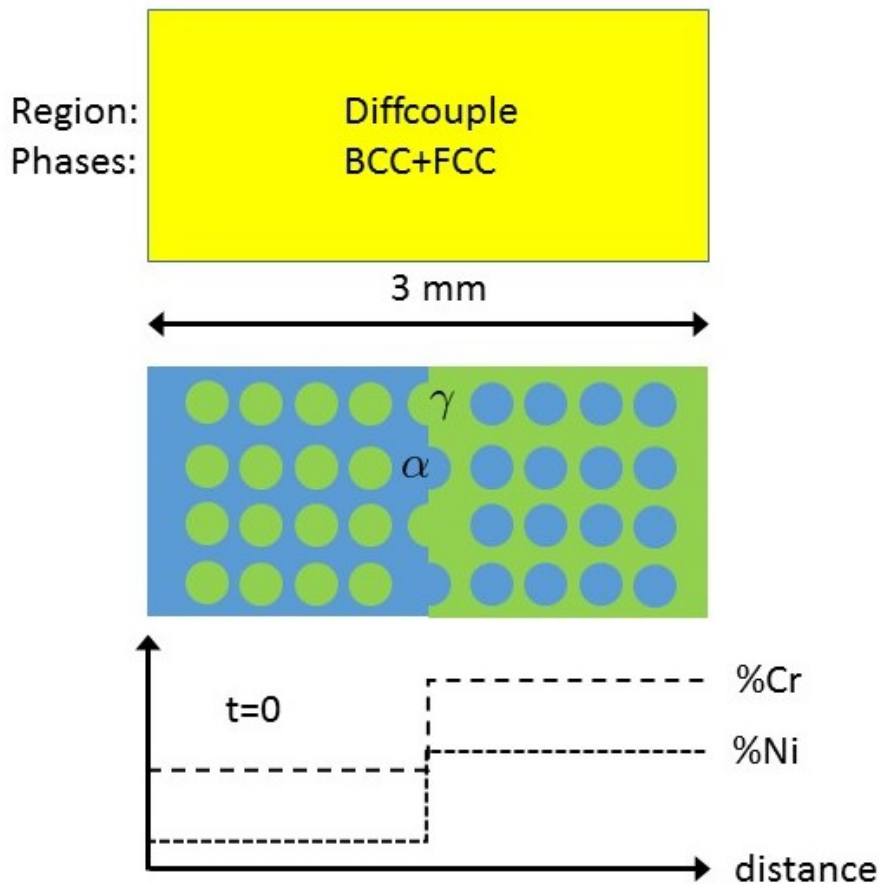

Schematic view of the initial state of the Multiphase example. Two ternary Fe-Cr-Ni alloys form a diffusion couple. There is a single region (diffcouple) where both the bcc and fcc phases are entered. Both alloys are duplex bcc+fcc, but the majority phase is bcc (α) in the left-hand side alloy and fcc (γ) in the right.

Theory for the Multiphase Simulation

More details about the homogenization model for multiphase simulations can be found in Larsson and Engström (2006)¹ and Larsson and Höglund (2009)². As mentioned in the description of this simulation, it is assumed that the material is locally fully equilibrated and that the local phase fractions, phase compositions and so forth are obtained from an equilibrium calculation with the local overall composition as a condition. From a numerical point of view the homogenization model treats the multiphase material as a single phase having the “average”, or “effective”, properties of the local phase mixture.

When estimating the effective kinetics of a multiphase mixture the product of solubility and mobility in each phase is considered. It is therefore convenient to define

$$\Gamma_k^\phi = M_k^\phi c_k^\phi$$

for each phase ϕ . The effective kinetics of the multiphase mixture is denoted and in this example it was evaluated using the lower Hashin-Shtrikman bound. The default method is a simple rule of mixtures

$$\Gamma^* = \sum_{\phi} f^{\phi} \Gamma_k^{\phi}$$

where f^{ϕ} is the volume fraction of ϕ . The flux is obtained as

$$J_k = -\Gamma_k^* \frac{\partial \mu_k}{\partial z}$$

which replaces the single-phase equation

$$J_k = L_{kk} \frac{\partial \mu_k}{\partial z} = M_k c_k \frac{\partial \mu_k}{\partial z}$$

for multiphase simulations.


1. Larsson, Henrik, and Anders Engström. 2006. “A Homogenization Approach to Diffusion Simulations Applied to $\alpha + \gamma$ Fe–Cr–Ni Diffusion Couples.” *Acta Materialia* 54 (9): 2431–39.

2. Larsson, Henrik, and Lars Höglund. 2009. “Multiphase Diffusion Simulations in 1D Using the DICTRA Homogenization Model.” *Calphad* 33 (3): 495–501.


Multiphase Example Project

For the multiphase simulation, you can open the example project file included with your installation to see how it is set up.

1. Open Thermo-Calc.
2. From the main menu, select **File** → or **Help** → **Examples Files**. The Graphical Mode folder opens by default.
3. Open the **Diffusion Module - DICTRA** folder and locate the `D_03_Diffusion_Multiphase.tcu` file and double-click to open it.
4. The project opens in Thermo-Calc. Click the top Project node (renamed to *Diffusion_Multiphase*). At the bottom of the **Configuration** window click **Perform Tree**.

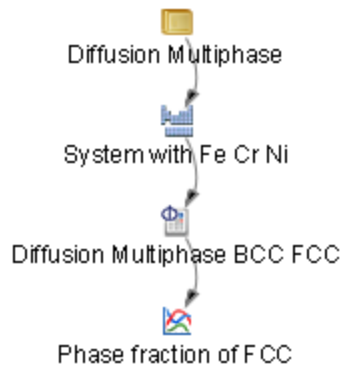

When completed, the results are plotted in the Results window.

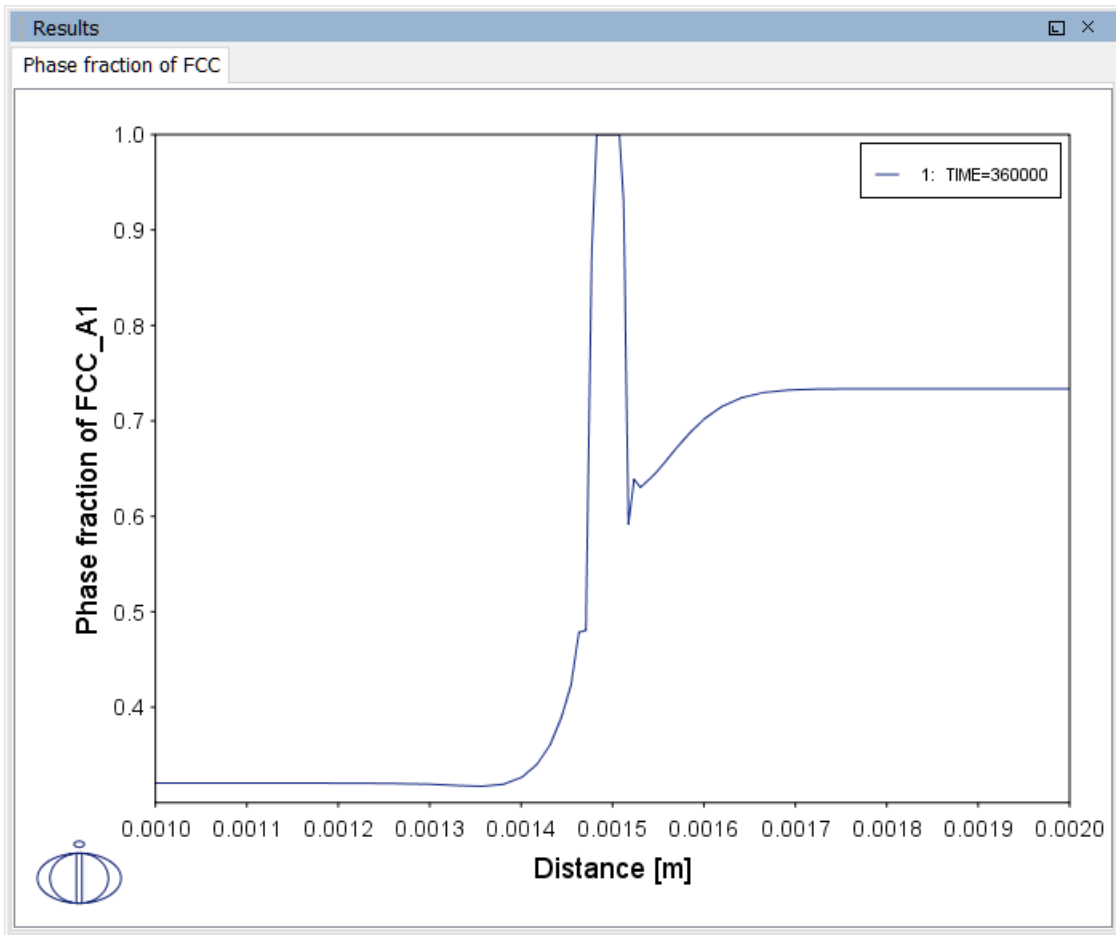

System Definer Settings

This is a continuation from the previous examples and uses the short cuts already described. You can alternatively open a saved project and edit the settings.

Add the Databases and the Elements

1. Open a new instance of Thermo-Calc.
2. In the **My Project** window click the **Diffusion Simulation** template icon.
3. In the System Definer **Configuration** window click the **Package** list and choose **Demo: Steels and Fe-alloys (FEDEMO, MFEDEMO)**.
4. In the **Periodic Table**, click **Fe**, then **Cr** and **Ni**.
5. Right-click **System Definer** and rename it to **System with Fe Cr Ni**.
6. Save the project file with a new name, e.g. *DiffusionMultiphase*.

Diffusion Calculator Settings

After you have made the settings to the [System Definer](#), you add the diffusion calculation parameters.


Define the Ferrite and Austenite Regions

1. In the **Project** window, click the **Diffusion Calculator** node.
2. For **Composition unit** select **Mole fraction**.

Keep the default Length unit (**m**). A **Planar** geometry is used for all the examples.

3. In the **Region Name** field, enter `Diffcouple`.
4. In the **Width** field enter `0.003` and enter `60` points.
5. Select **Double geometric** as the grid type.

A double geometric grid is similar to the geometric grid used in the moving phase boundary example. The difference is that two geometrical factors are entered: one for the lower and one for the upper half of the region. In the lower half of the region the distance between subsequent grid points decreases by 15 % (0.85) and in the upper half it increases by 15 % (1.15). The resulting grid has a much larger grid point density toward the middle of the domain where there are sharp changes in composition.

6. Enter these values as follows. In the **Lower ratio** field enter `0.85` and `1.15` in the **Upper ratio** field.
7. Choose **FCC_A1** from the **Phase** list.
8. Next to *Phase* click the **Add quantity** button . From the **Phase** list select **BCC_A2**.
9. Click **Edit** next to **Composition profiles**. **Fe** is chosen as the **Dependent component**. Define **Component Cr** and **Component Ni**.
10. Choose **Step** for both the Cr and Ni elements.
11. In each of the fields for Cr (**from, to, step at**) enter `0.257`, `0.423` and `0.0015`, respectively.
12. In each of the fields for Ni (**from, to, step at**) enter `0.0647`, `0.275` and `0.0015`, respectively. Click **Apply**.

⚠ Initial Composition of FCC_A1
✕

Dependent component: Fe ▾

Component Cr: Step ▾ from 0.257 to 0.423 step at 0.0015 m

Component Ni: Step ▾ from 0.0647 to 0.275 step at 0.0015 m

The resulting Cr profile is thus 0.257 on the left half of the domain and 0.423 on the right with a sharp step at the center (as shown in ["About the Multiphase Simulation" on page 36](#)).

Define the Thermal Profile

1. The default **Isothermal** profile is used for this example.
2. In the **Temperature** field, enter 1100 and choose **Celsius** from the list.
3. In the **Simulation time** field, enter 100 and choose **Hours** from the list.
4. Right-click **Diffusion Calculator** and rename it to **Diffusion Multiphase BCC FCC**.

Choose the Homogenization Function

The local kinetics of the multiphase mixture must be estimated by means of some function that may depend on the local phase fractions, phase compositions and the mobilities of the individual phases.

There are many such homogenization functions to choose from. In this particular example the **General lower Hashin–Shtrikman bound**¹ is a good choice.

1. To choose this homogenization function, go to the **Diffusion Calculator** and click the **Options** tab.



Homogenization is already automatically selected as the **Default solver** because multiple phases are selected in a region.

2. Go to the section *Homogenization Model Specific* from the **Homogenization function** list select **General lower Hashin–Shtrikman bound**.

¹ Z. Hashin and S. Shtrikman (1962), "A Variational Approach to the Theory of the Effective Magnetic Permeability of Multiphase Materials", *J. Appl. Phys.*,33(10), pp. 3125–3131.

Plot Renderer Settings


After you enter the settings for the [System Definer](#) and [Diffusion Calculator](#), you define the plot parameters. For this example you want to plot the mole fraction fcc phase as a function of distance at the end of the heat treatment.

The plot of phase fraction vs distance shows that a single phase fcc zone has formed and this was also observed experimentally, see A. Engström, 1995: "Interdiffusion in multiphase, Fe-Cr-Ni diffusion couples", *Scand. J. Metall.*, 24 (1), pp. 12–20.

1. Click the **Plot Renderer** node.
2. Click to clear the **Automatic scaling** check box.
3. Enter the **Limits**: 0.001 to 0.002 step 1.0E-4.
4. From the second **Axis variable** list, choose **Phase fraction** and **FCC_A1**.

The screenshot shows the Plot Renderer settings dialog box. It is divided into three main sections: X-axis, Y-axis, and Time. The X-axis section has 'Distance' selected for the axis variable, 'm' for units, and 'All regions' for the region. The axis type is 'Linear'. The limits are set to 0.001 to 0.002 with a step of 1.0E-4, and the 'Automatic scaling' checkbox is unchecked. The Y-axis section has 'Phase fraction' selected for the axis variable, 'By mole' for the unit, and 'FCC_A1' for the phase. The axis type is 'Linear'. The limits are set to 0.0 to 1.0 with a step of 0.1, and the 'Automatic scaling' checkbox is checked. The Time section has 'Hours' selected for the unit and '100.0' entered in the text box. At the bottom left, there are three icons: a green plus sign, a grey minus sign, and a checked checkbox.

5. Click **Perform** If you have entered the same settings you will get this plot result.

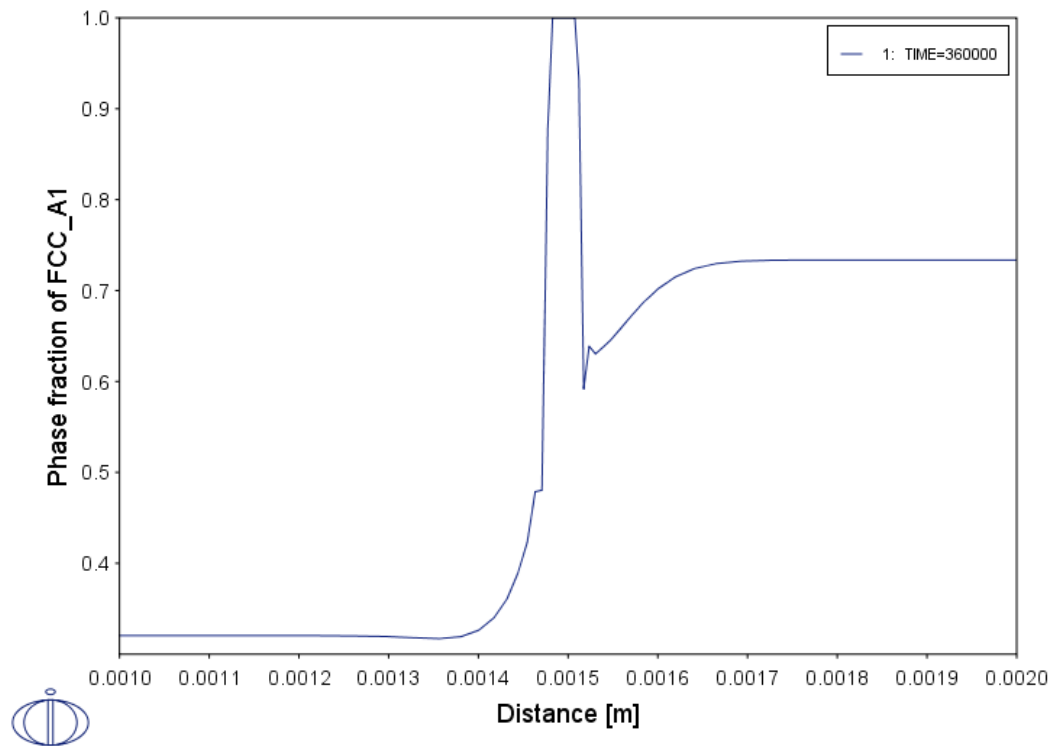

6. Right-click **Plot Renderer** and rename it to **Phase fraction of FCC**.

References

1. J.-O. Andersson, T. Helander, L. Höglund, P. Shi, and B. Sundman, "Thermo-Calc and DICTRA, computational tools for materials science," *Calphad*, vol. 26, no. 2, pp. 273–312, Jun. 2002.
2. A. Borgenstam, L. Höglund, J. Ågren, and A. Engström, "DICTRA, a tool for simulation of diffusional transformations in alloys," *J. Phase Equilibria*, vol. 21, no. 3, pp. 269–280, May 2000.
3. J.-O. Andersson and J. Ågren, "Models for numerical treatment of multicomponent diffusion in simple phases," *J. Appl. Phys.*, vol. 72, no. 4, pp. 1350–1355, Aug. 1992.
4. S. Crusius, L. Höglund, U. Knoop, G. Inden, and J. Ågren, "On the growth of ferrite allotriomorphs in Fe-C alloys," *Zeitschrift für Met.*, vol. 83, no. 10, pp. 729–738, 1992.
5. J. Ågren, "Numerical Treatment of Diffusional Reactions in Multicomponent Alloys," *J. Phys. Chem. Solids*, vol. 43, no. 4, pp. 385–391, 1982.
6. S. Crusius, G. Inden, U. Knoop, L. Höglund, and J. Ågren, "On the numerical treatment of moving boundary problems," *Zeitschrift für Met.*, vol. 83, no. 9, pp. 673–678, 1992.
7. L. Höglund, *Computer simulation of diffusion controlled transformations in multicomponent alloys*, PhD Thesis, KTH Royal Institute of Technology, Stockholm, Sweden, 1997.
8. Z. Hashin and S. Shtrikman, "A Variational Approach to the Theory of the Effective Magnetic Permeability of Multiphase Materials," *J. Appl. Phys.*, vol. 33, no. 10, pp. 3125–3131, 1962.
9. A. Engström, "Interdiffusion in multiphase, Fe-Cr-Ni diffusion couples," *Scand. J. Metall.*, vol. 24, no. 1, pp. 12–20, 1995.
10. H. Larsson and A. Engström, "A homogenization approach to diffusion simulations applied to $\alpha + \gamma$ Fe-Cr-Ni diffusion couples," *Acta Mater.*, vol. 54, no. 9, pp. 2431–2439, May 2006.
11. H. Larsson and L. Höglund, "Multiphase diffusion simulations in 1D using the DICTRA homogenization model," *Calphad Comput. Coupling Phase Diagrams Thermochem.*, vol. 33, no. 3, pp. 495–501, 2009.

Next Steps

Below are suggestions for you to learn more about using the Diffusion (DICTRA) Module.

- Browse the Online Help (Help → Online Help) or open one of the available PDFs included with your installation (Help → Manuals Folder).
- You have been working with in Graphical Mode. You might also want to try the *Diffusion Module Console Mode Quick Start Guide* (Help → Manuals Folder). This will further prepare you to work with the Console Mode examples (Help → Examples Files), which contain many simulation types and advanced functionality not available in Graphical Mode.
- You can also go to the Thermo-Calc website to see if there are other options suited to you, such as a course or video tutorials. (Help → Video Tutorials and Help → Thermo-Calc Website).